


# EX-ROLL

## CHANGING THE IMAGE



1

Remove the screw (indicated by the red circle) on either side of the base and lift off cover.

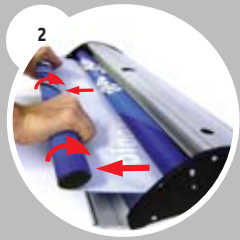

2

Unroll the whole banner on to the top roller until you can see the spring-loaded bottom roller.


Don't let go!



3

Align the groove on the bottom roller with the gap on the side of the base.

Immediately replace one of the screws to hold the spring loaded bottom roller in place to prevent it unrolling.

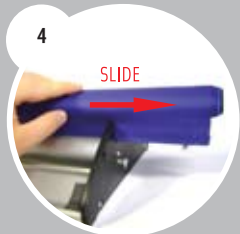

4

Slide the image out of the base.



5

BLACK STOPPER

Unroll the image.

Unclip one of the black stoppers on the end of the roller and slide out the image.



6

With the back of the image facing the same side as the hole in the bar, slide in the new image.

Close the black stopper on the end of the roller.



7


With the image facing to the front of the base, slide the new image into the base and centre the image on the roller.



8

While firmly holding the image, remove the screw holding the spring-loaded base roller in place.


Slowly unwind the image back onto the base roller, keeping it centred so it rolls evenly on both sides.

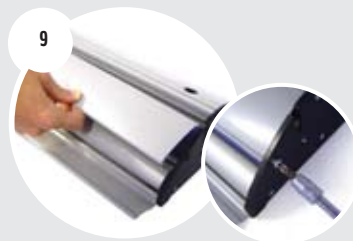

9

Replace the cover on the base and insert a screw on each side.

## TROUBLE SHOOTING

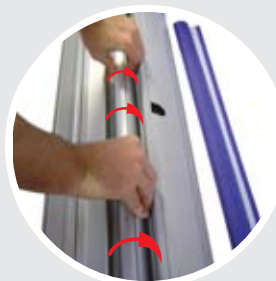

At steps 3 and 8, if the base roller is released it will spin and become loose.

To get the tension back into the base roller, remove the image from the roller and then wind the base roller 22 times to spring-load it. Immediately, replace a screw to hold the roller in place.

Proceed from step 6.